


ETM I/O Board

For Use with ETM9900 and ETM9560 Terminals

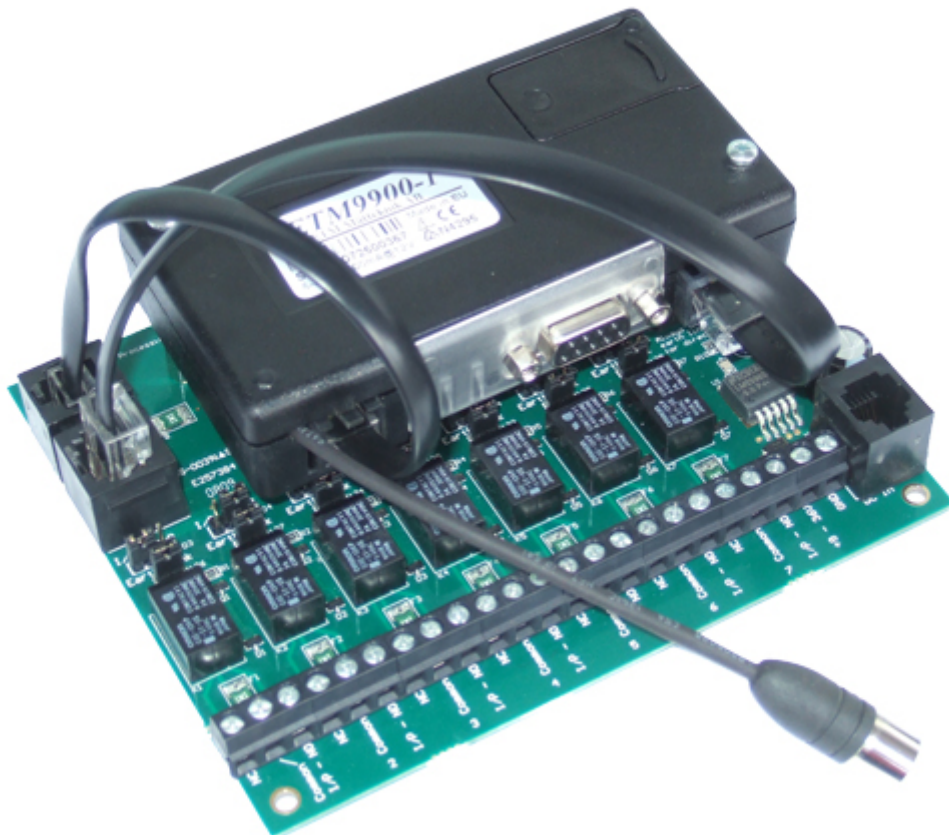

The I/O board allows for the connection of typical commercial/industrial sensors and control components such as;

- ❑ 0-10v or 4-20mA sensors
- ❑ Switching of DC loads to a maximum of 2A 30VDC

Kit Includes;

- ❑ RJ12-RJ12 cable for linking power from I/O board to modem
- ❑ RJ45-RJ45 cable for linking I/O from modem to I/O board
- ❑ PCB standoffs and screws for attaching modem to Board


Picture shows I/O Board with ETM9900-1 Modem Mounted and RJ12 Power and RJ45 I/O leads connected

Typical Applications Include;

- ❑ Irrigation pump control
- ❑ Alarm and control of air conditioning & refrigeration units
- ❑ Remote monitoring water or fuel tank levels
- ❑ Remote monitoring of environmental conditions such as temperature, humidity, rainfall etc

Product Dimensions and Connection Diagram

The unit has been designed to allow the modem (either ETM9560 or ETM9900) to be mounted separately or fitted to the standoff's provided on the board as shown below. Power can be provided to the unit either via the screw terminals as marked on the unit or via one of the RJ12 terminals using one of ETM Pacific's standard power supplies. The modem should be powered from the board using the short RJ12-RJ12 cable provided. The modems I/O's are connected to the board using the RJ45-RJ45 cable provided.

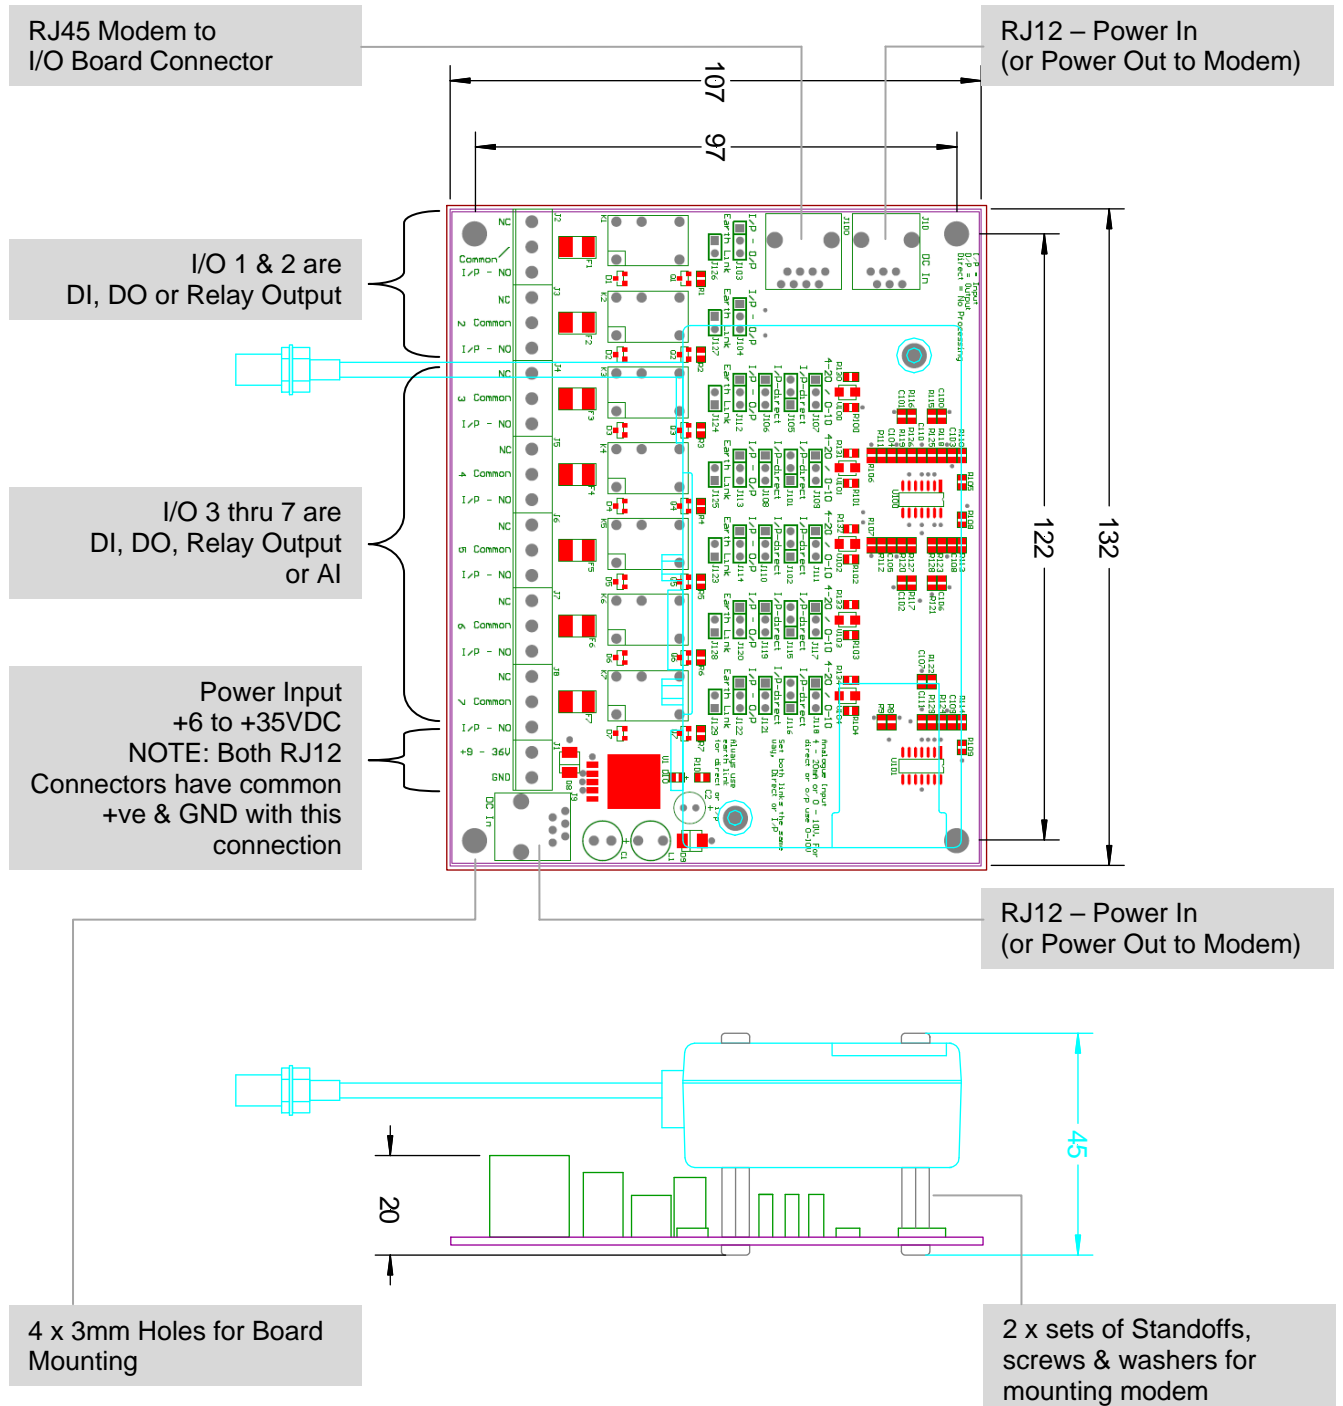

DI – Digital Input, I/O 1 can be pulse input
DO – Digital Output
AI – Analogue Input, can be either 0-10V or 4-20mA

I/O Connectivity

Jumpers located on the board allow for the following connectivity/signal processing for each I/O – note that the terminal needs to be configured to accept the processed signal either as a Digital Input, Digital Output or Analogue input as appropriate.

I/O No.	Required Jumper Position by I/O Function				
	Direct I/O	Relay Output Max 2A 30VDC	Relay Output Max 2A 30VDC (<i>Not Grounded¹</i>)	0-10V Analogue Input ²	4-20mA Analogue Input ³
1 & 2				N/A	N/A
3 thru 7					


Notes:

1. Common of relay not connected to ground of I/O board, note ground of I/O board is connected to modem ground.
2. If using 0-10V input (to I/O's 3 thru 7) this board converts the 0-10V signal to 0-2.5V which is an acceptable analogue input range for ETM Terminals
3. If using 4-20mA input (to I/O's 3 thru 7) this board converts the 4-20mA signal to 0.5-2.5V which is an acceptable analogue input range for ETM Terminals

Technical Specifications

- ❑ Dimensions 132mm x 107mm x 20mm (without modem attached)
- ❑ Weight 140g
- ❑ Operating Temperature Range -20°C to 55°C
- ❑ Input power supply +5 to 35VDC via RJ12 connector or screw terminals
- ❑ Power consumption 12mA at 12VDC (without modem connected)

Application Examples

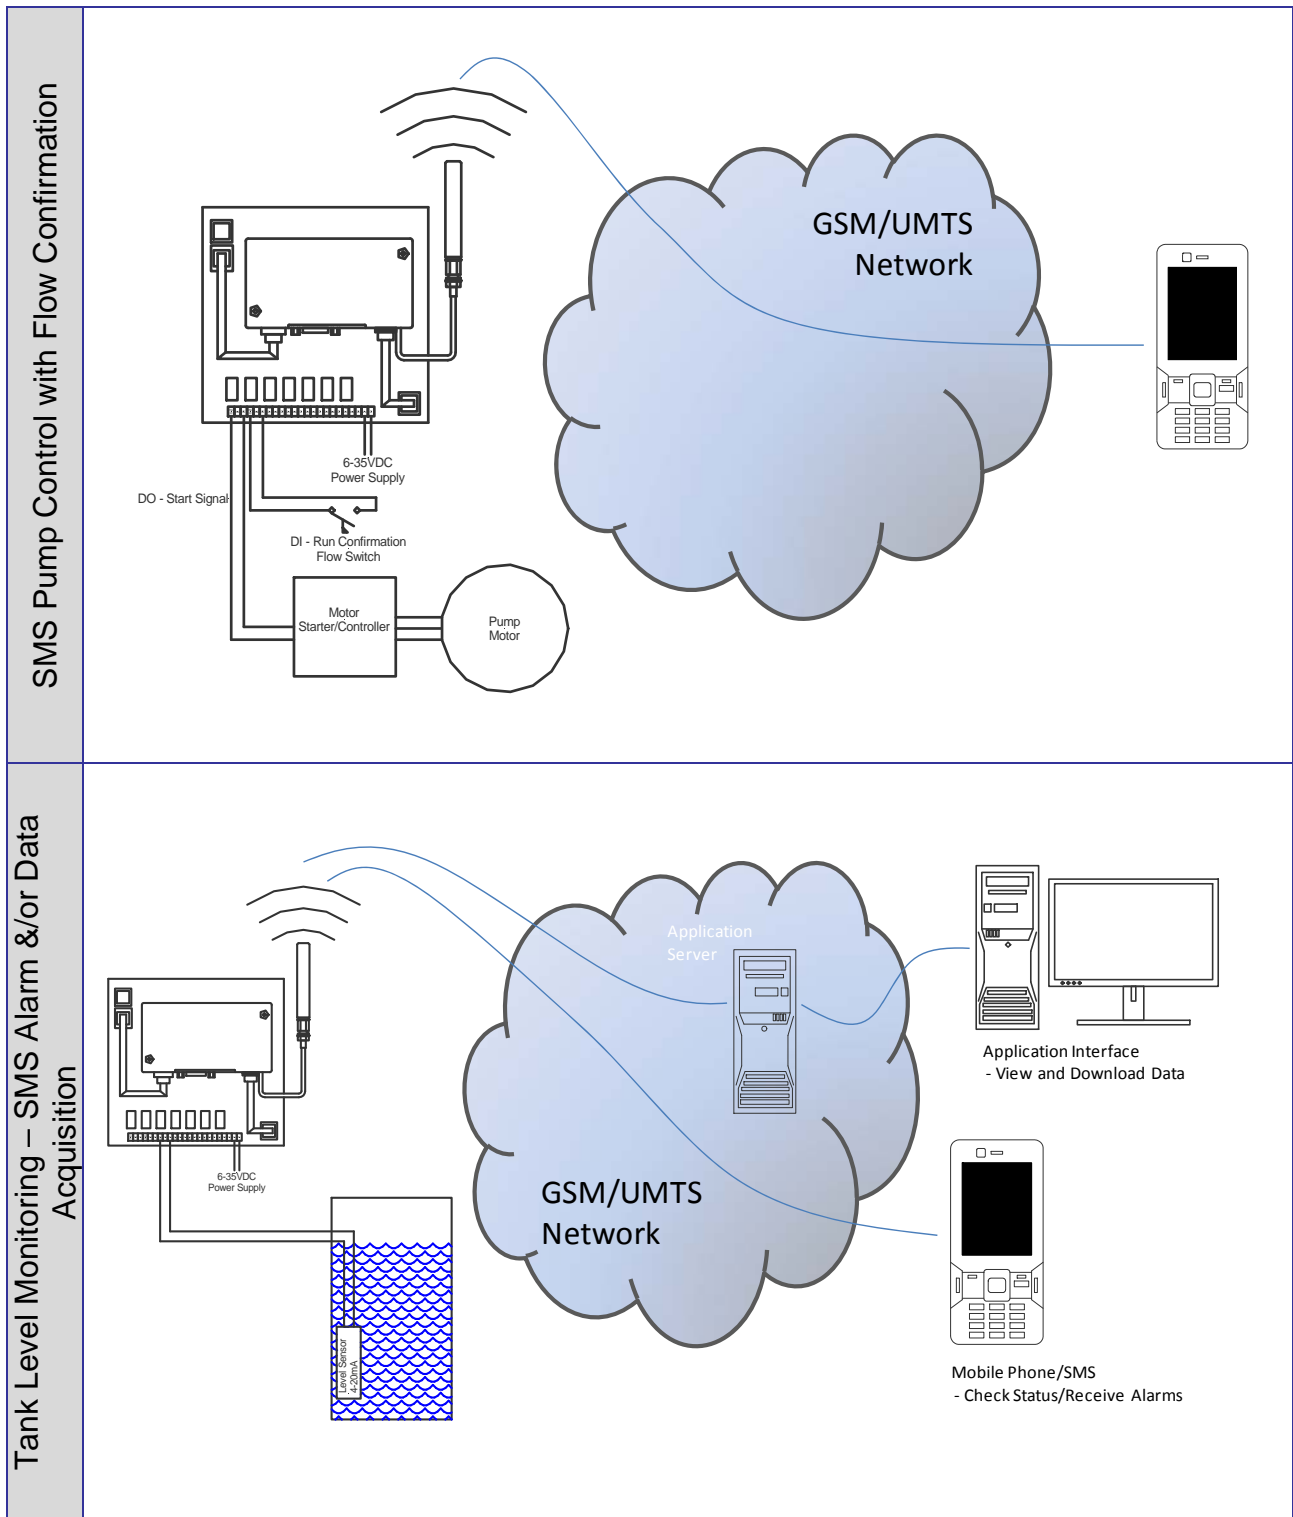

ETM Matteknik AB
 Ekbacksvägen 32
 SE-168 69 Bromma
 Sweden
 Tel: +46-(0)8 252875
 Fax: +46-(0)8 801110
www.etm.se
etm@etm.se

ETM Communications AB
 Nioörtsvägen 28 A
 SE-126 32 Hägersten
 Sweden
 Tel: +46 (0)8 54902070
 Fax: +46 (0)8 54902060
www.etmc.se
info@etmc.se

ETM Pacific Pty Ltd
 Suite 6, 273 Alfred Street
 North Sydney NSW 2060
 Australia
 Ph: +61-2-9956-7377
 Fax: +61-2-9956-5791
www.etmpacific.com.au
info@etmpacific.com.au